



SC-ISOSLICE-8

4 Analog Output SC-ISOSLICE Unit

Whilst every effort has been taken to ensure the accuracy of this document, we accept no responsibility for damage, injury, loss or expense resulting from errors or omissions, and reserve the right of amendment without notice.

Cynergy3 Components Ltd

This document may not be reproduced in any way without the prior written permission of the company

September 2017


SC-ISOSLICE-8

This is the unit with 4 analogue outputs.

Channel Number and Output Range Selection

The channel number is set up using the 12 way dipswitch.
If all switches are off, channel number is 1 (invalid):

Address Switches	Action
8	add 1
7	add 2
6	add 4
5	add 8
4	add 16
3	add 32
2	add 64

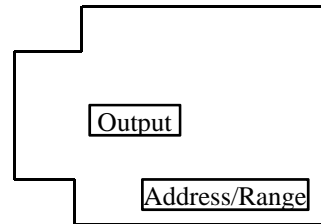

	Switches									Switches								1 = On, 0 = Off
Channel	2	3	4	5	6	7	8	Channel	2	3	4	5	6	7	8			
1	0	0	0	0	0	0	0	9	0	0	0	1	0	0	0			
2	0	0	0	0	0	0	1	10	0	0	0	1	0	0	1			
3	0	0	0	0	0	1	0	11	0	0	0	1	0	1	0			
4	0	0	0	0	0	1	1	12	0	0	0	1	0	1	1			
5	0	0	0	0	1	0	0	13	0	0	0	1	1	0	0			
6	0	0	0	0	1	0	1	14	0	0	0	1	1	0	1			
7	0	0	0	0	1	1	0	15	0	0	0	1	1	1	0			
8	0	0	0	0	1	1	1	16	0	0	0	1	1	1	1			

The SC-ISOSLICE-8 has been factory calibrated for two different ranges for each output. These can be chosen using switches 9 to 12 on the 12 way switch.

Range Switches	Output	Off	On
9	1	4-20 mA	0-10V
10	2	4-20 mA	0-10V
11	3	4-20 mA	0-10V
12	4	4-20 mA	0-10V

Output Type Selection

The output type is set up using the 4 way dipswitch

Output Switches	Output	Off	On
1	1	mA	Voltage
2	2	mA	Voltage
3	3	mA	Voltage
4	4	mA	Voltage



Calibration of the SC-ISOSLICE-8

There are 2 push buttons and an LED.

The units have been calibrated for 4-20mA on all channels so recalibration should not be necessary.

Choose the output channel to calibrate by pushing the raise or lower button when the LED is green. It will flash red between one and four times indicating the output to be calibrated.

When the output has been chosen push and release both buttons.

The LED will go red.

Press raise/lower buttons to adjust output value until correct.

Push and release both buttons. The LED will go off briefly (to indicate it has learnt and saved a new value) then change to green.

Push and release both buttons

The LED will go amber.

Press raise/lower buttons to adjust output value until correct

Push and release both buttons, the LED will again go off briefly then change to green.

SC-ISOSLICE-8 errors

Green LED flashing (E 2):

The eeprom checksum indicates the eeprom is corrupt. Push and release both buttons to clear the error. Recalibration of all outputs will be required.

Red LED flashing (E 5):

The address chosen using the Address switches is invalid.

2. Connections

- 7. Output 4 mA, V +ve
- 8. Output 4 mA, V -ve,
- 12.

- 5. Output 3 mA, V +ve
- 6. Output 3 mA, V -ve,
- 11.

- 1. Output 1 mA, V +ve
- 2. Output 1 mA, V -ve
- 9.

- 3. Output 2 mA, V +ve
- 4. Output 2 mA, V -ve,
- 10.

